



WIRED FOR
115V, 1Ø

* FOR MASTER/SLAVE WIRING ONLY!
SEE INSTALLATION MANUAL.

UNITS SHIPPED AS RIGHT HAND.
FOR LEFT HAND SEE INSTRUCTION MANUAL.

PowerMaster	
FOR USE WITH 2000 STYLE OPERATOR WITH GSMCB-01 BOARD	
DATE: 7/26/01	REV. 0
BY: F.S.	
CONTROL WIRING DIAGRAM	
WIRING DIAGRAM 6001	
© Copyright PowerMaster 1997	
No portion of this diagram may be reproduced without the expressed written permission of the manufacturer.	