



- ▲ REMOVE BLUE JUMPER WHEN USED
- Ⓐ WIRE IS NOT USED WHEN EXTERNAL INTERLOCK SWITCH OR STOP BUTTON IS USED.
- Ⓑ OBSTRUCTION SENSING DEVICES MAY BE N.O. TYPE (STANDARD AIR SWITCH, ELECTRIC EDGE, ETC.) OR N.C. "FAIL-SAFE" TYPE (PHOTOCELL, ETC.)
- Ⓒ MOVE RED WIRE FROM # 7 TO # 5 FOR MOMENTARY PRESSURE TO CLOSE.

MODEL LH/LJ/LT	
LCPC6 MOTOR CONTROL	
DATE: 12-15-97	REV. 12
BY: F.S.	
SPECIAL:	
PSC MOTOR	
WIRING DIAGRAM LD335	