



A TREADLES, PULL SWITCHES, KEY SWITCHES, WANDS, PHOTOELECTRIC DEVICES, ETC. MAY BE CONNECTED WHERE INDICATED.

B PULL SWITCHES AND SINGLE CONTACT CONTROL STATIONS MAY BE CONNECTED TO TERMINALS INDICATED.

NOTE: COIL CORD MUST BE USED ON SAFETY EDGE.

TO SAFETY EDGE (SEE SAFETY EDGE WIRING PAGE)

PowerMaster	
WIRED FOR: SAFETY EDGE TO REVERSE	
DATE: 8-25-99	REV. 22
BY: F.S.	RPL
SPECIAL: DYNAMIC BRAKING INTRINSICALLY SAFE S.E. FALCON "SUPSAF" BOARD	
WIRING DIAGRAM NO. EX 31 IS/FS	
© Copyright PowerMaster 1997 No portion of this diagram may be reproduced without the expressed written permission of the manufacturer.	