



A TREADLES, PULL SWITCHES, KEY SWITCHES, WANDS, PHOTOELECTRIC DEVICES, ETC. MAY BE CONNECTED WHERE INDICATED.

B PULL SWITCHES AND SINGLE CONTACT CONTROL STATIONS MAY BE CONNECTED TO TERMINALS INDICATED.

NOTE: COIL CORD MUST BE USED ON SAFETY EDGE.

TO SAFETY EDGE
(SEE SAFETY EDGE
WIRING PAGE)

| PowerMaster | |
|-----------------------------------------------------------------------------------------------------------------------------------------------|---------|
| WIRED FOR: SAFETY EDGE TO REVERSE | |
| DATE: 8-25-99 | REV: 22 |
| BY: F.S. | RPL |
| SPECIAL: DYNAMIC BRAKING INTRINSICALLY SAFE S.E. FALCON "SUPSAF" BOARD | |
| WIRING DIAGRAM NO. EX 33 IS/F5 | |
| © Copyright PowerMaster 1997 No portion of this diagram may be reproduced without the expressed written permission of the manufacturer. | |