



UNITS SHIPPED AS RIGHT HAND.
 FOR LEFT HAND SEE INSTRUCTION MANUAL.

*FOR MASTERSLAVE WIRING ONLY!
 SEE INSTALLATION MANUAL.

*FOR MASTERSLAVE WIRING ONLY!
 (SEE INSTRUCTIONS)

WIRED FOR 115V, 1Ø

| | |
|--|---------------|
| PowerMaster | |
| FOR USE WITH: 2000 SERIES OPERATOR WITH GSMCB02 BOARD | |
| DATE: 2/13/02 | REV. 3 |
| BY: F.S. | RSG, RSW, MSW |
| CONTROL WIRING DIAGRAM | |
| WIRING DIAGRAM 6002 | |
| © Copyright PowerMaster 1997 | |
| No portion of this diagram may be reproduced without the expressed written permission of the manufacturer. | |