



**WIRED FOR
115V, 1Ø**

***FOR MASTER/SLAVE WIRING ONLY!
SEE INSTALLATION MANUAL.**

**UNITS SHIPPED AS RIGHT HAND.
FOR LEFT HAND SEE INSTRUCTION MANUAL.**

PowerMaster	
FOR USE WITH: MSG 2000 SERIES OPERATOR WITH GSMCB-01 BOARD	
DATE: 10/2/01	REV. 0
BY: F.S.	MSG
CONTROL WIRING DIAGRAM	
WIRING DIAGRAM 6004	
© Copyright PowerMaster 1997 No portion of this diagram may be reproduced without the expressed written permission of the manufacturer.	