



- ① OPEN
- ② RADIO
- ③ 2 WIRE EDGE
- ④ 4 WIRE EDGE
- ⑤ N.C. SENSOR

- ▲ REMOVE JUMPER WHEN USED
- ① WIRE IS NOT USED WHEN EXTERNAL INTERLOCK SWITCH OR STOP BUTTON IS USED.
- ② STANDARD AIR SWITCH, ELECTRIC EDGE, ETC.) OR N.C. "FAIL-SAFE" TYPE (PHOTOCELL, ETC.)

UNITS SHIPPED AS RIGHT HAND, FOR LEFT HAND SWITCH RED AND BLUE MOTOR LEADS AT CONTACTOR

MODEL MSW	SS6 TPU CONTROL
DATE: 12-15-97	REV. 5
BY: F.S.	MOTOR CONTACTOR
WIRING DIAGRAM 5639	

WIRED FOR 115V, 1Ø