
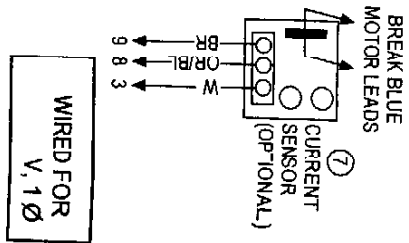


- (A) WIRE IS NOT USED WHEN EXTERNAL INTERLOCK SWITCH OR STOP BUTTON IS USED.
- (B) OBSTRUCTION SENSING DEVICES MAY BE N.O. TYPE (STANDARD AIR SWITCH, ELECTRIC EDGE, ETC.)

RUN TIME SAFETY SELECT:
 28.8 SECONDS: SWITCHES 1 AND 2 'ON'
 45 SECONDS: SWITCH 1 'OFF', SWITCH 2 'ON'
 60 SECONDS: SWITCHES 1 AND 2 'OFF'
 92.13 SECONDS: SWITCH 1 'ON', SWITCH 2 'OFF'
 #3 DIP SWITCH MUST BE SET TO 'ON'

UNITS SHIPPED AS RIGHT HAND. FOR LEFT HAND, SET TOGGLE FROM 'RH' TO 'LH' AND SWITCH YELLOW AND BLUE MOTOR LEADS AT CONTACTOR!

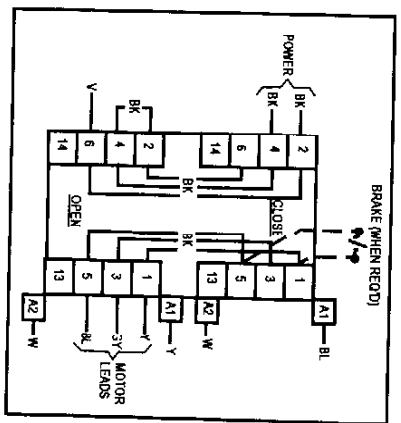

PowerMaster	
MODEL 859, SG, SGI	
586 TPU CONTROL	
DATE: 12-2-02	REV. 9
BY: F.S.	SHEET 1 OF 2
120V, 208V, 240V	
CAP START MOTOR	
WIRING DIAGRAM 5871 LTR	
© Copyright PowerMaster 1997 No portion of this diagram may be reproduced without the expressed written permission of the manufacturer.	