



RSW-550D WIRING DIAGRAM FOR: SINGLE OR MASTER/SLAVE

NOTE:

- (1) Operators are shipped as right-hand units. To wire for left-hand operation, reverse red and blue motor wires at capacitors.
- (2) On slave units, remove yellow jumper from #4 to #5 and blue jumper from #2 to #3.

CAUTION: Make sure power is off before making any adjustments.