



NOTES:
 1-WIRE - NOT FURNISHED WHEN EXTERN/ INTLK SWITCH IS USED.
 NOT FURNISHED WHEN STOP BUTTON IS USED.
 3-WIRE - NOT FURNISHED WHEN TIMER DEFEAT SWITCH IS USED.

A - TREADLES, PULL SWITCHES, KEY SWITCHES, WANDS, PHOTO-ELECTRIC DEVICES, ETC. MAY BE CONNECTED TO TERMINALS INDICATED.
 B - REMOTE CONTROL UNITS (EXCLUDING TREADLES AND PHOTO-ELECTRIC UNITS, PULL SWITCHES AND SINGLE CONTACT CONTROL STATIONS, MAY BE CONNECTED TO TERMINALS INDICATED.

WIRED FOR:
 V-10

GATE OPERATOR	
MTR/CNTR: 10	
DATE: 4-27-82	REV 7
BY: R.L.	5-10-88
WIRING DIAGRAM NO. 331-L/R	
FOR MODEL SG & BSG SINGLE, MASTER-SLAVE	