



EXT'L INT'LK  
(WHEN REQ'D)  
ALL INTERLOCKS WIRE IN SERIES  
BETWEEN TERMINAL #4 AND STOP BUTTON

NOTE:  
1- WIRE IS NOT USED WHEN EXTERNAL INTERLOCK  
SWITCH OR STOP BUTTON IS USED.

WIRING TYPE: RELEASE OPERATOR WITH LOCK BAR SENSITIVITY, CONSTANT PRESSURE BOTH DIRECTIONS.	
MTR/CNTR: 1 Ø	
DATE: 11-3-97	REV: 6
BY: F.S.	
SPECIAL: LOCK BAR SENSING CIRCUIT	
WIRING DIAGRAM NO. 21-3 LBS	
© Copyright PowerMonitor 1997 No portion of this diagram may be reproduced without the expressed written permission of the manufacturer.	