



- ▲ REMOVE JUMPER WHEN USED.
- (A) REMOVE IF EXTERNAL INTERLOCK IS USED.
- (B) OBSTRUCTION SENSING DEVICES MAY BE N.O. TYPE (STANDARD AIR SWITCH, ELECTRIC EDGE, ETC.) OR N.C. "FAIL-SAFE" TYPE (PHOTOCELL, ETC.).

PowerMaster	
MODEL P1500 AND P5000	PRB CONTROL
DATE: 5-9-01	REV. 1
BY: F.S.	R.P.L.
SPECIAL:	
WIRING DIAGRAM 5663-C	
© Copyright PowerMaster 1997 No portion of this diagram may be reproduced without the expressed written permission of the manufacturer.	