



*FOR MASTER/SLAVE WIRING ONLY! (SEE INSTRUCTIONS)

WIRED FOR 115V, 1Ø

UNITS SHIPPED AS RIGHT HAND. FOR LEFT HAND SEE INSTRUCTION MANUAL.

PowerMaster	
FOR USE WITH 2000 SERIES SWING GATE OPERATOR WITH GSMCB-01 BOARD	
DATE: 2/13/02	REV. 3
BY: F.S.	CSWC, CSWI
CONTROL WIRING DIAGRAM	
WIRING DIAGRAM 6001SW	
© Copyright PowerMaster 1997	
No portion of this diagram may be reproduced without the expressed written permission of the manufacturer.	