
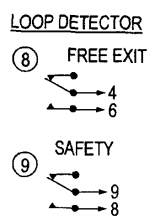


- ▲ REMOVE JUMPER WHEN USED.
- (A) WIRE IS NOT USED WHEN EXTERNAL INTERLOCK SWITCH OR STOP BUTTON IS USED.
- (B) OBSTRUCTION SENSING DEVICES MAY BE N.O. TYPE (STANDARD AIR SWITCH, ELECTRIC EDGE, ETC.) OR N.C. "FAIL-SAFE" TYPE (PHOTOCCELL, ETC.).
- (C) MOVE RED WIRE FROM # 7 TO # 5 FOR MOMENTARY PRESSURE TO CLOSE.

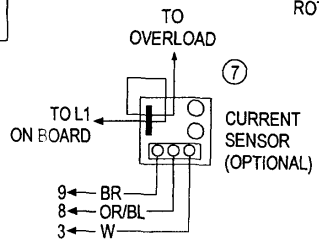

PowerMaster	
MODEL LH/LJ/LT PRB-2 MOTOR CONTROL	
DATE: 6-98	REV. 2
BY: F.S.	R.P.L.
SPECIAL: PSC MOTOR	
WIRING DIAGRAM LD-345	
© Copyright PowerMaster 1997 No portion of this diagram may be reproduced without the expressed written permission of the manufacturer.	