



RSW-550 WIRING DIAGRAM FOR: SINGLE OR MASTER/SLAVE DIAGRAM #RSW-55B-2

NOTE: (1) Operators are shipped as right-hand units.
 To wire for left-hand operation, reverse RED and BLUE Motor wires at capacitors.
 Reset limit switches for left-hand operation. (See pg.4)

CAUTION: MAKE SURE POWER IS OFF BEFORE MAKING ANY ADJUSTMENTS.
 FOR MASTER/SLAVE OPERATION (SEE PG.6)