



RSW-550D WIRING DIAGRAM FOR: SINGLE OR MASTER/SLAVE DIAGRAM RSW-SSB-2D

- NOTE: (1) Operators are shipped as right-hand units.
 To wire for left-hand operation, reverse red and blue motor wires at capacitors.
 Reset limit switches for left-hand operation (See pg. 4)
- (2) On slave units, remove yellow jumper from #4 to #5 and blue jumper from #2 to #3.

CAUTION: Make sure power is off before making any adjustments.
 For Master/Slave Operation (See pg. 6)