



**UNITS SHIPPED AS RIGHT HAND.  
FOR LEFT HAND SEE INSTRUCTION MANUAL.**

PowerMaster	
FOR USE WITH: 2000 SERIES SWINGING GATE OPERATOR WITH GSMCB-01 BOARD	
DATE: 2/13/02	REV. 3
BY: F.S.	CSWC, CSWI
CONTROL WIRING DIAGRAM	
WIRING DIAGRAM 6001SW	
© Copyright PowerMaster 1997 No portion of this diagram may be reproduced without the expressed written permission of the manufacturer.	