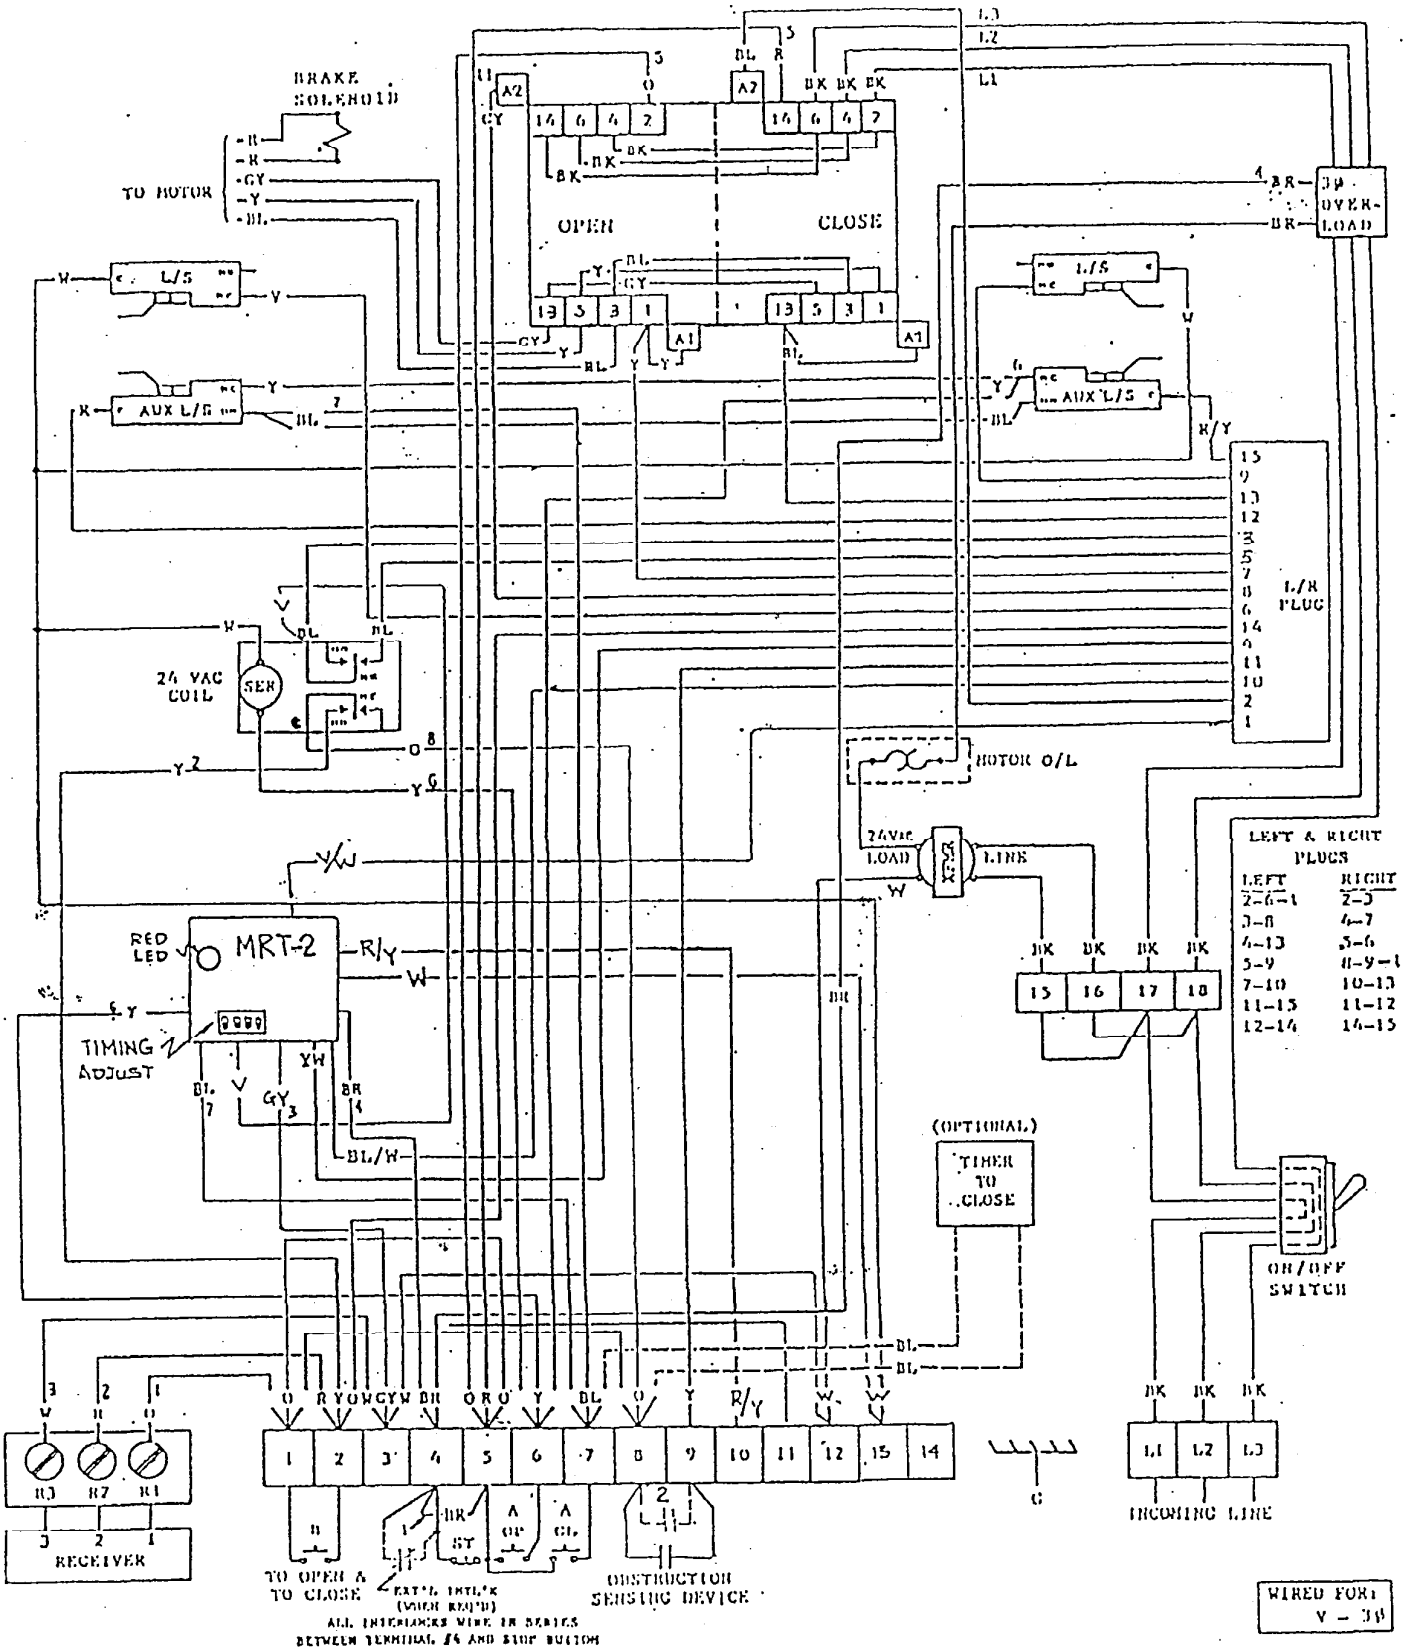

NOTE:

1 - WIRE IS NOT USED WHEN EXTERNAL INTERLOCK SWITCH OR STOP BUTTON IS USED.

2 - TIMER DEFEAT SWITCH, WHEN USED, CONNECTS ACROSS TERMINALS #8 & #9. CLOSING SWITCH DISABLES TIMER.

A - TREADLES, PULL SWITCHES, KEY SWITCHES, WANDS, PHOTO-ELECTRIC DEVICES, ETC. MAY BE CONNECTED TO TERMINALS INDICATED.

B - REMOTE CONTROL UNITS (EXCLUDING TREADLES AND PHOTO-ELECTRIC UNITS), PULL SWITCHES AND SINGLE CONTACT CONTROL STATIONS, MAY BE CONNECTED TO TERMINALS INDICATED.

TERMINALS #3 & #4 PROVIDE 24 VAC FOR ACCESSORIES

WARNING: DO NOT SHORT TERMINALS #3 and #4

COMMERCIAL SLIDE GATE OPERATOR	
HTR/CNTR: 3Φ	
DATE: 4-27-02	REV. 12-9-93
BY: R.L.	Dr. by: J.D.
OPTIONAL: TIMER TO CLOSE. IN DASHED LINES	
WIRING DIAGRAM NO. 333-L/R-MRT2	
FOR MODEL SC1, SC, BSC. SINGLE, MASTER/SLAVE.	