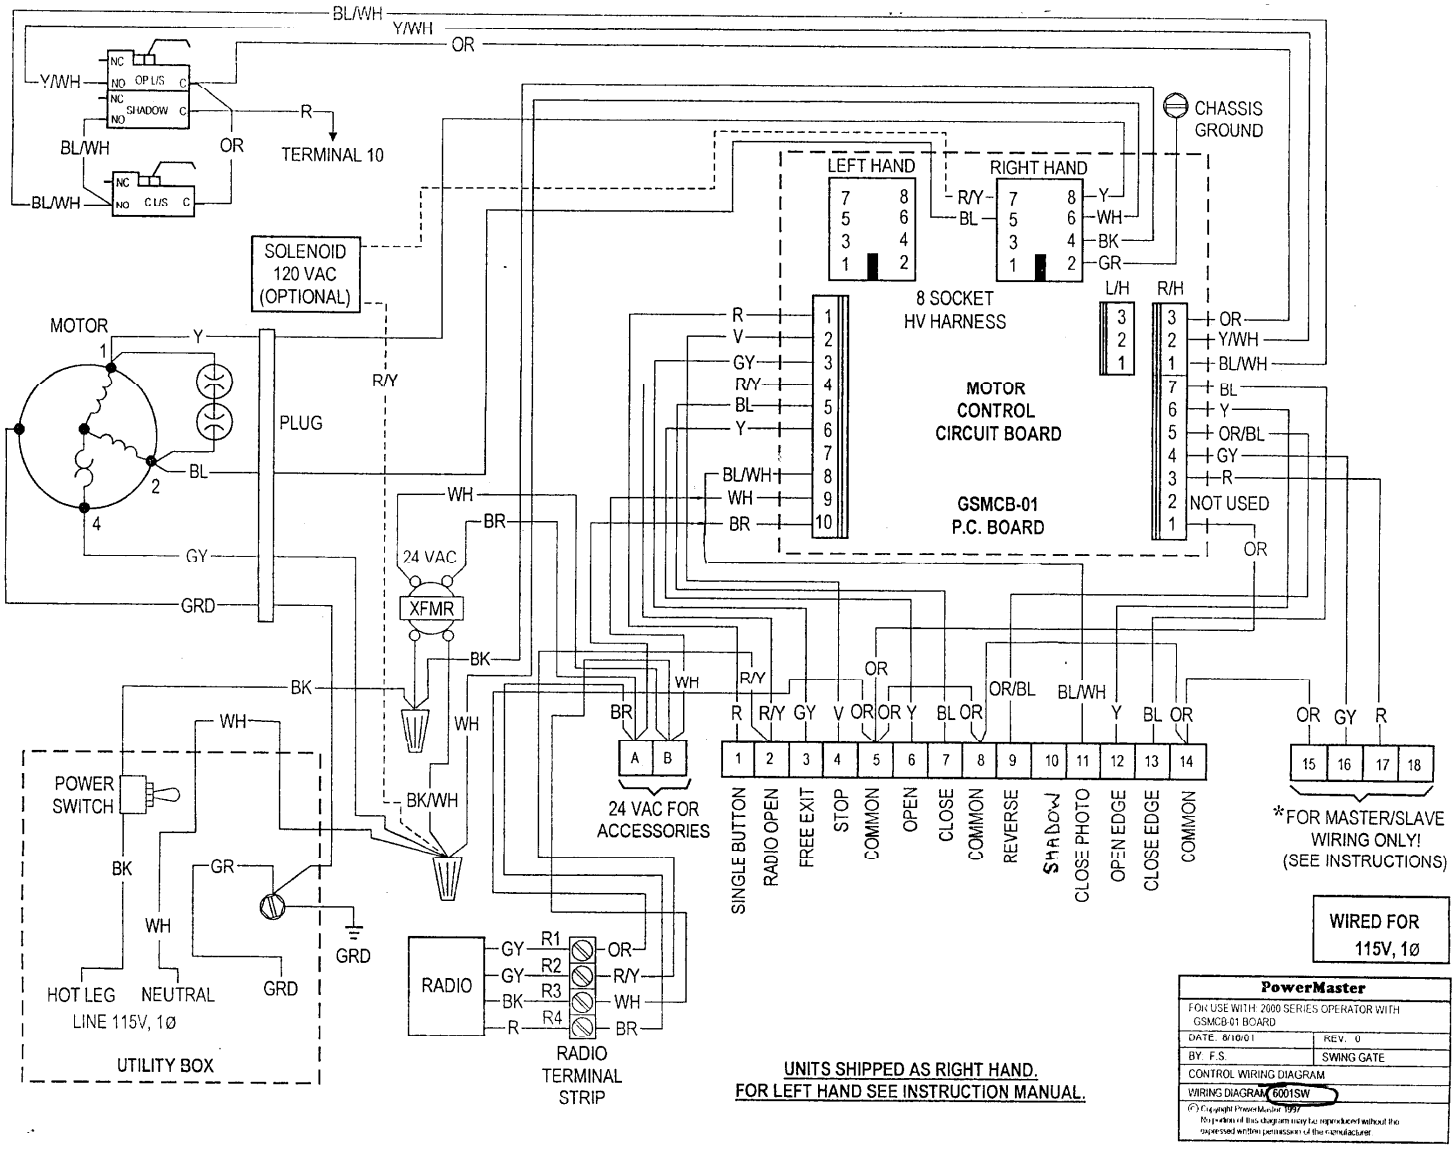
BL/WH
Y/WH
OR
NC
NO OP U/S C
NC
SHADOW C
NO
Y/WH
R
TERMINAL 10
BL/WH
OR
NC
NO C.U/S C
BL/WH
CHASSIS GROUND
LEFT HAND
RIGHT HAND
7 8
5 6
3 4
1 2
R/Y
BL
Y
WH
BK
GR
8 SOCKET HV HARNESS
L/H
R/H
SOLENOID 120 VAC (OPTIONAL)
MOTOR
1
Y
2
BL
4
GY
GRD
PLUG
R/Y
R
V
GY
R/Y
BL
Y
BL/WH
WH
BR
1 2 3 4 5 6 7 8 9 10
MOTOR CONTROL CIRCUIT BOARD
GSMCB-01 P.C. BOARD
3 2 1
7 6 5 4 3 2 1
OR
Y/WH
BL/WH
BL
Y
OR/BL
GY
R
NOT USED
OR
WH
BR
24 VAC
XFMR
BK
BK
WH
WH
BK/WH
POWER SWITCH
BK
GR
WH
GRD
HOT LEG
NEUTRAL
LINE 115V, 1Ø
GRD
UTILITY BOX
RADIO
GY R1
GY R2
BK R3
R R4
OR
R/Y
WH
BR
RADIO TERMINAL STRIP
A B
24 VAC FOR ACCESSORIES
R R/Y GY V OR OR Y BL OR OR/BL BL/WH Y BL OR
1 2 3 4 5 6 7 8 9 10 11 12 13 14
SINGLE BUTTON
RADIO OPEN
FREE EXIT
STOP
COMMON
OPEN
CLOSE
COMMON
REVERSE
SHADOW
CLOSE PHOTO
OPEN EDGE
CLOSE EDGE
COMMON
OR GY R
15 16 17 18
*FOR MASTER/SLAVE WIRING ONLY! (SEE INSTRUCTIONS)
WIRED FOR 115V, 1Ø
UNITS SHIPPED AS RIGHT HAND.
FOR LEFT HAND SEE INSTRUCTION MANUAL.
PowerMaster
FOR USE WITH: 2000 SERIES OPERATOR WITH GSMCB-01 BOARD
DATE: 6/10/01
REV: 0
BY: F.S.
SWING GATE
CONTROL WIRING DIAGRAM
WIRING DIAGRAM: 6001SW
© Copyright PowerMaster 1997
No portion of this diagram may be reproduced without the expressed written permission of the manufacturer