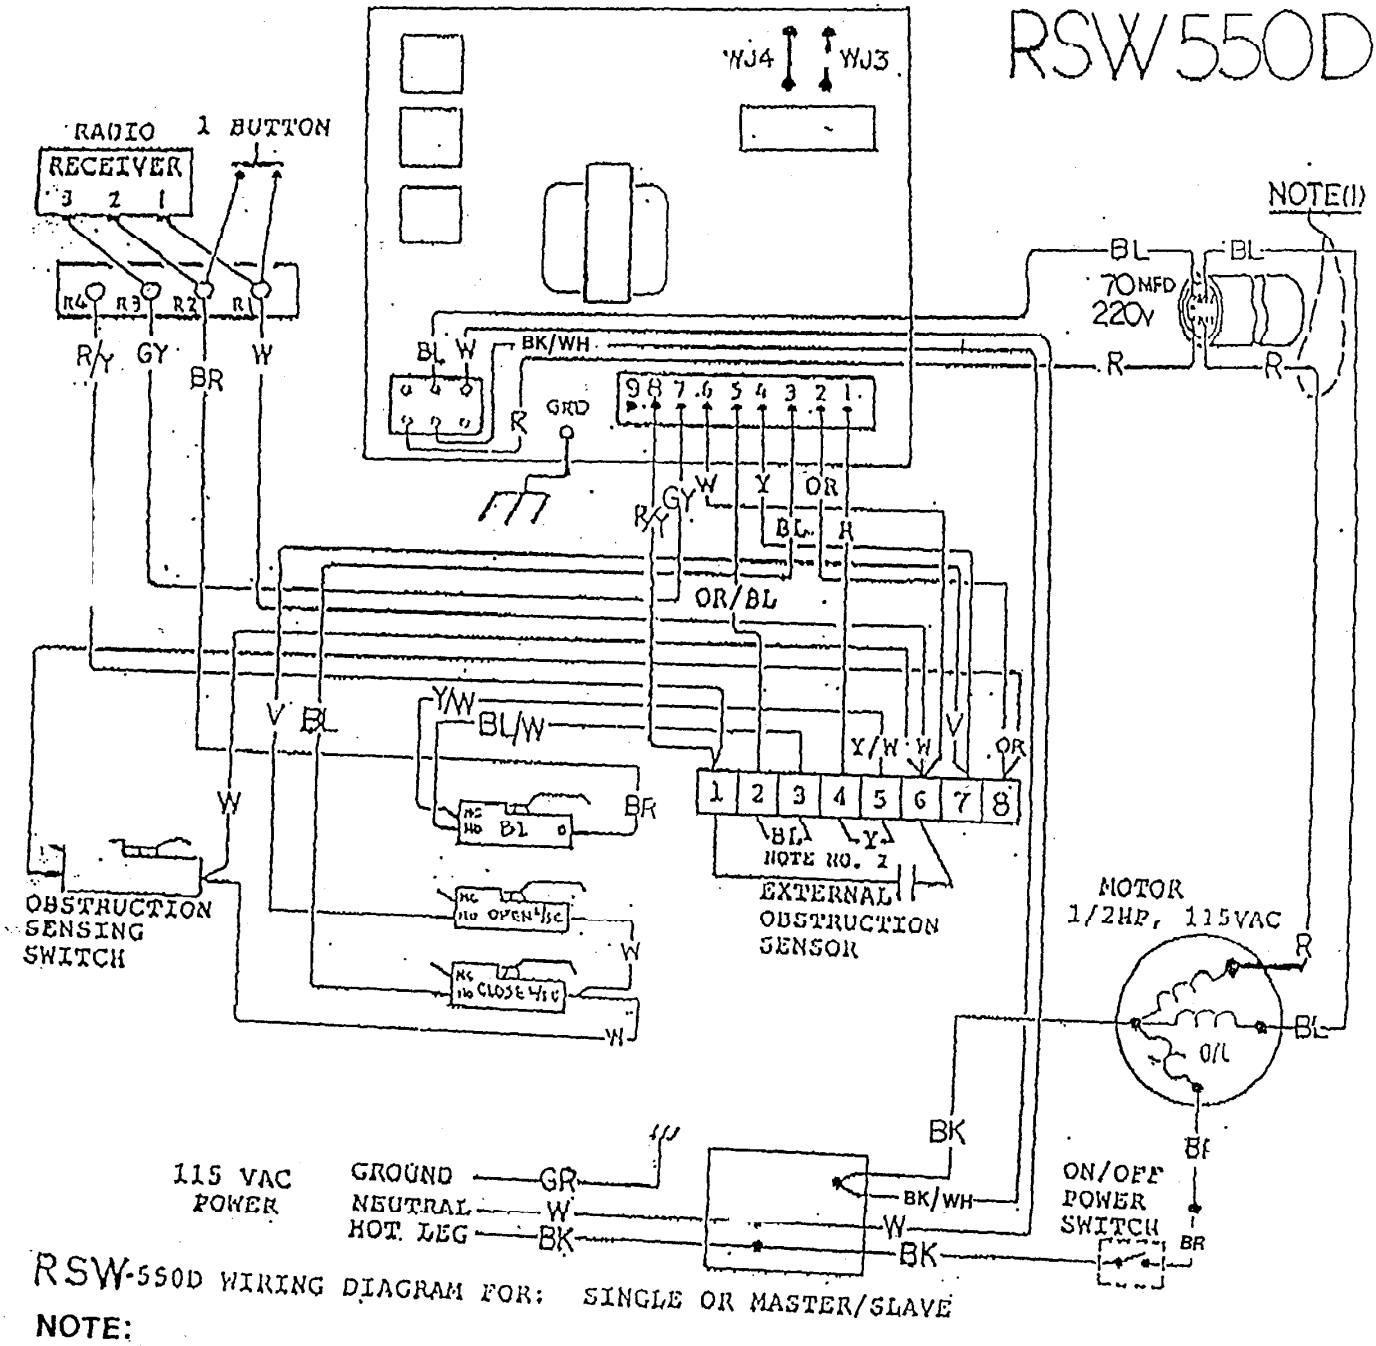

RSW-550D WIRING DIAGRAM FOR: SINGLE OR MASTER/SLAVE

NOTE:

1. Operators are shipped as right-hand units. To wire for left-hand operation, reverse red and blue motor wires at capacitors.
2. On slave units, remove yellow jumper from no. 4 to no. 5 and blue jumper from no. 2 to no. 3.

CAUTION: Make sure power is off before making any adjustments.

WIRING DIAGRAM

SSB-3D REV B 2-96