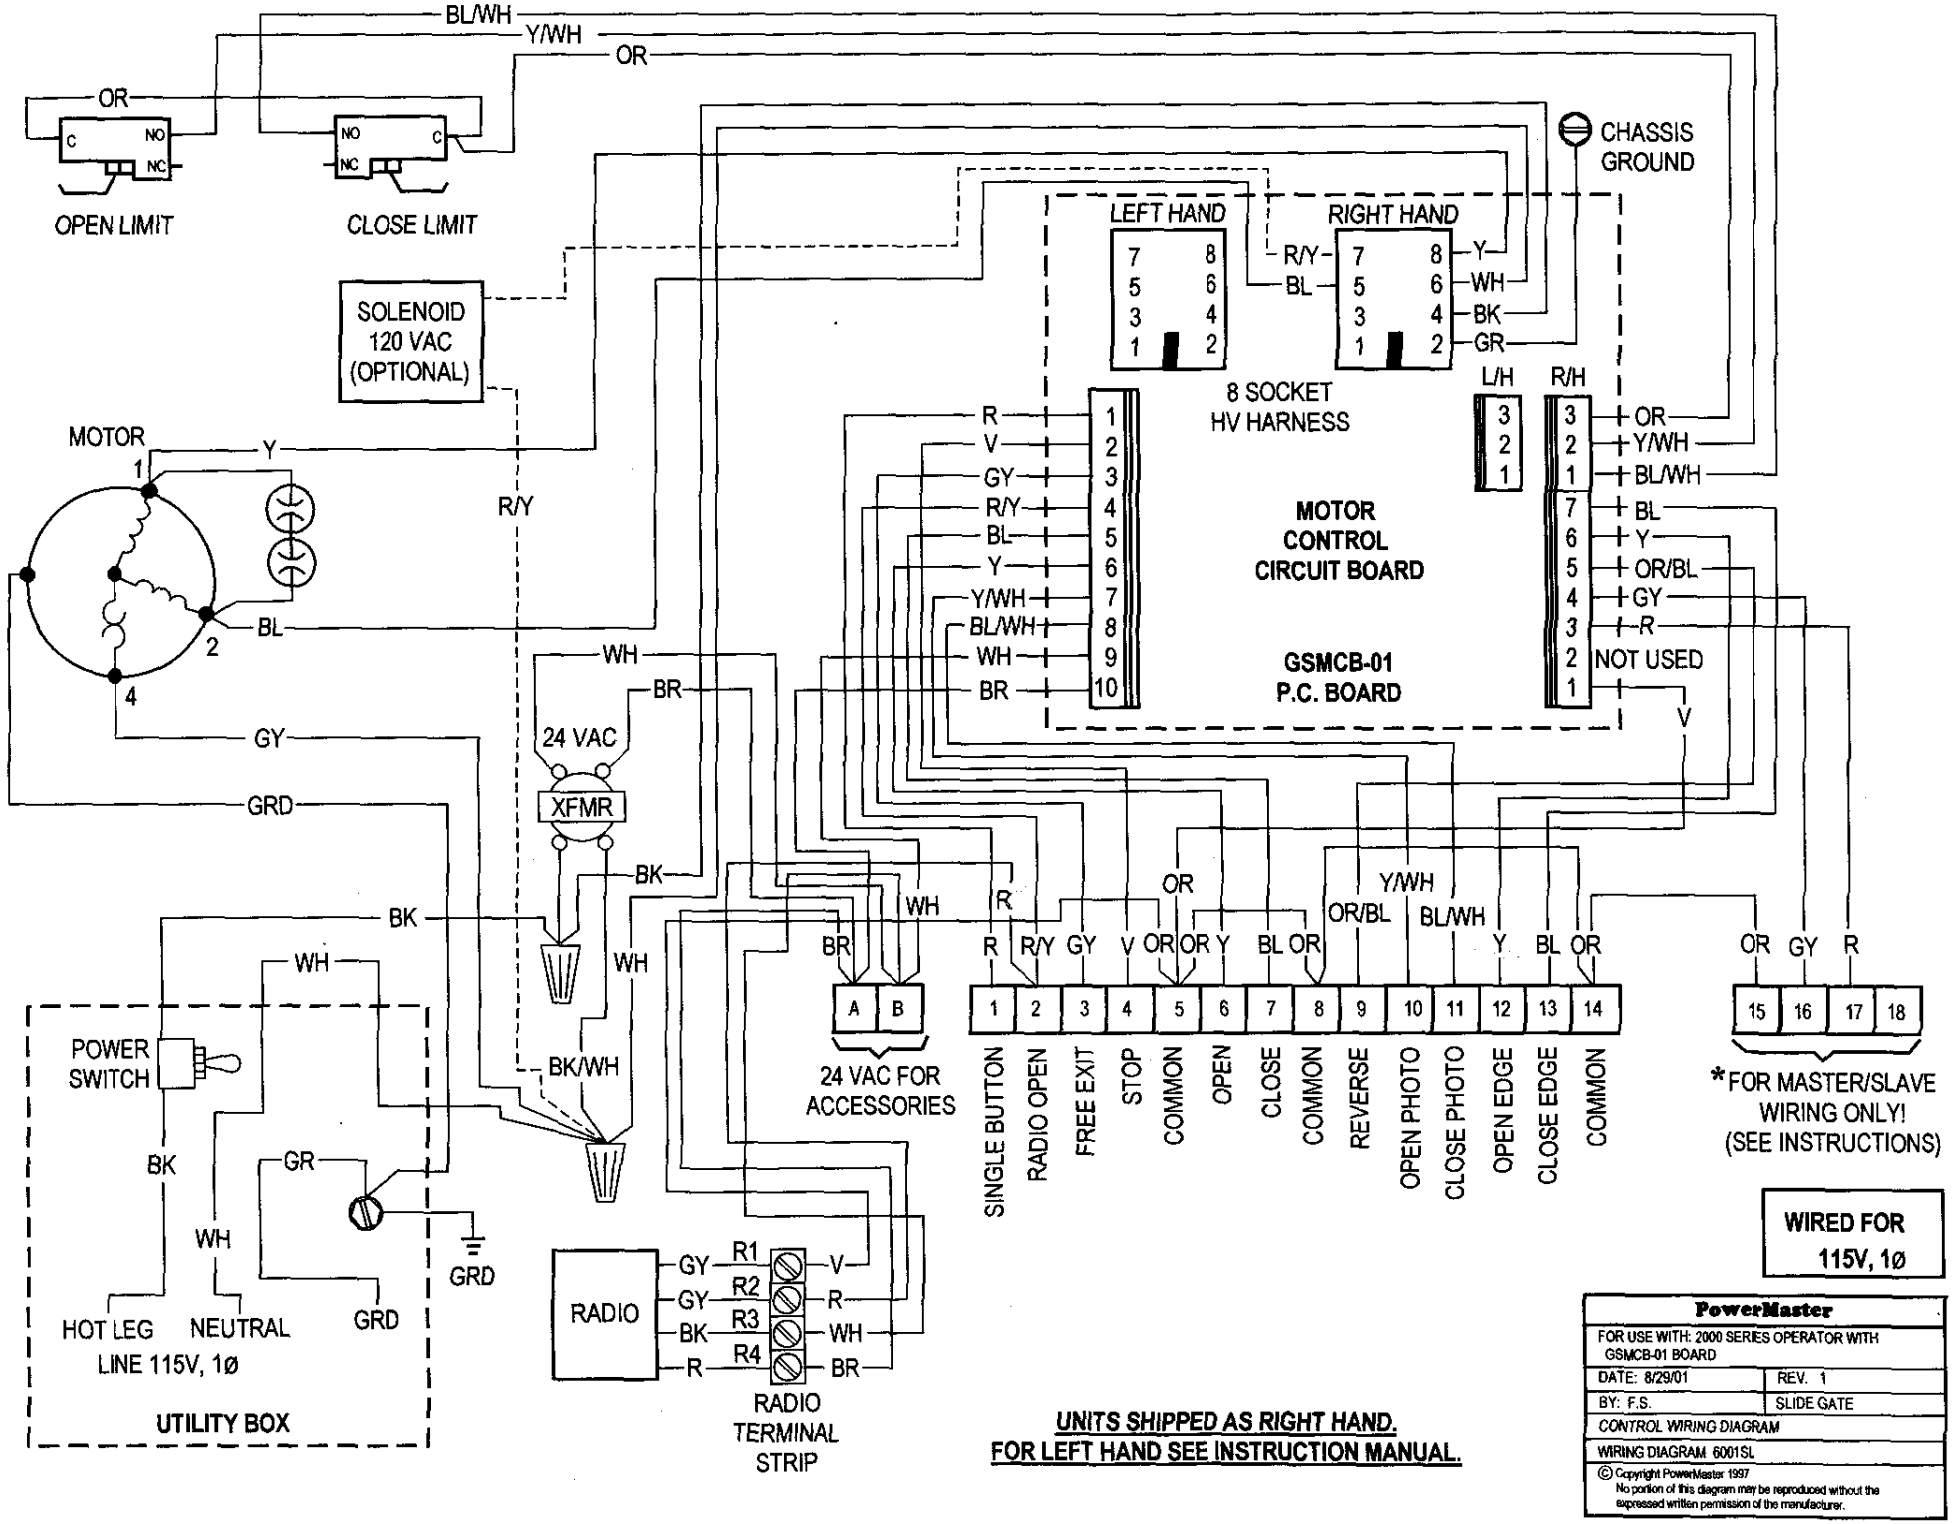
BL/WH
Y/WH
OR
OR
C
NO
NC
OPEN LIMIT
CLOSE LIMIT
CHASSIS GROUND
LEFT HAND
RIGHT HAND
R/Y
BL
Y
WH
BK
GR
8 SOCKET HV HARNESS
L/H
R/H
SOLENOID 120 VAC (OPTIONAL)
MOTOR
1
2
4
Y
R/Y
BL
R
V
GY
R/Y
BL
Y
Y/WH
BL/WH
WH
BR
MOTOR CONTROL CIRCUIT BOARD
GSMCB-01 P.C. BOARD
OR
Y/WH
BL/WH
BL
Y
OR/BL
GY
R
NOT USED
V
24 VAC
XFMR
GRD
BK
WH
BR
A
B
24 VAC FOR ACCESSORIES
R
R/Y
GY
V
OR
OR
Y
BL
OR
OR/BL
BL/WH
Y
BL
OR
OR
GY
R
1
2
3
4
5
6
7
8
9
10
11
12
13
14
15
16
17
18
SINGLE BUTTON
RADIO OPEN
FREE EXIT
STOP
COMMON
OPEN
CLOSE
COMMON
REVERSE
OPEN PHOTO
CLOSE PHOTO
OPEN EDGE
CLOSE EDGE
COMMON
*FOR MASTER/SLAVE WIRING ONLY! (SEE INSTRUCTIONS)
POWER SWITCH
BK
WH
GR
GRD
HOT LEG
LINE 115V, 1Ø
NEUTRAL
GRD
UTILITY BOX
BK/WH
RADIO
GY
GY
BK
R
R1
R2
R3
R4
V
R
WH
BR
RADIO TERMINAL STRIP
UNITS SHIPPED AS RIGHT HAND.
FOR LEFT HAND SEE INSTRUCTION MANUAL.
WIRED FOR 115V, 1Ø
PowerMaster
FOR USE WITH: 2000 SERIES OPERATOR WITH GSMCB-01 BOARD
DATE: 8/29/01
REV. 1
BY: F.S.
SLIDE GATE
CONTROL WIRING DIAGRAM
WIRING DIAGRAM 6001SL
© Copyright PowerMaster 1997
No portion of this diagram may be reproduced without the expressed written permission of the manufacturer.

6001SL.max