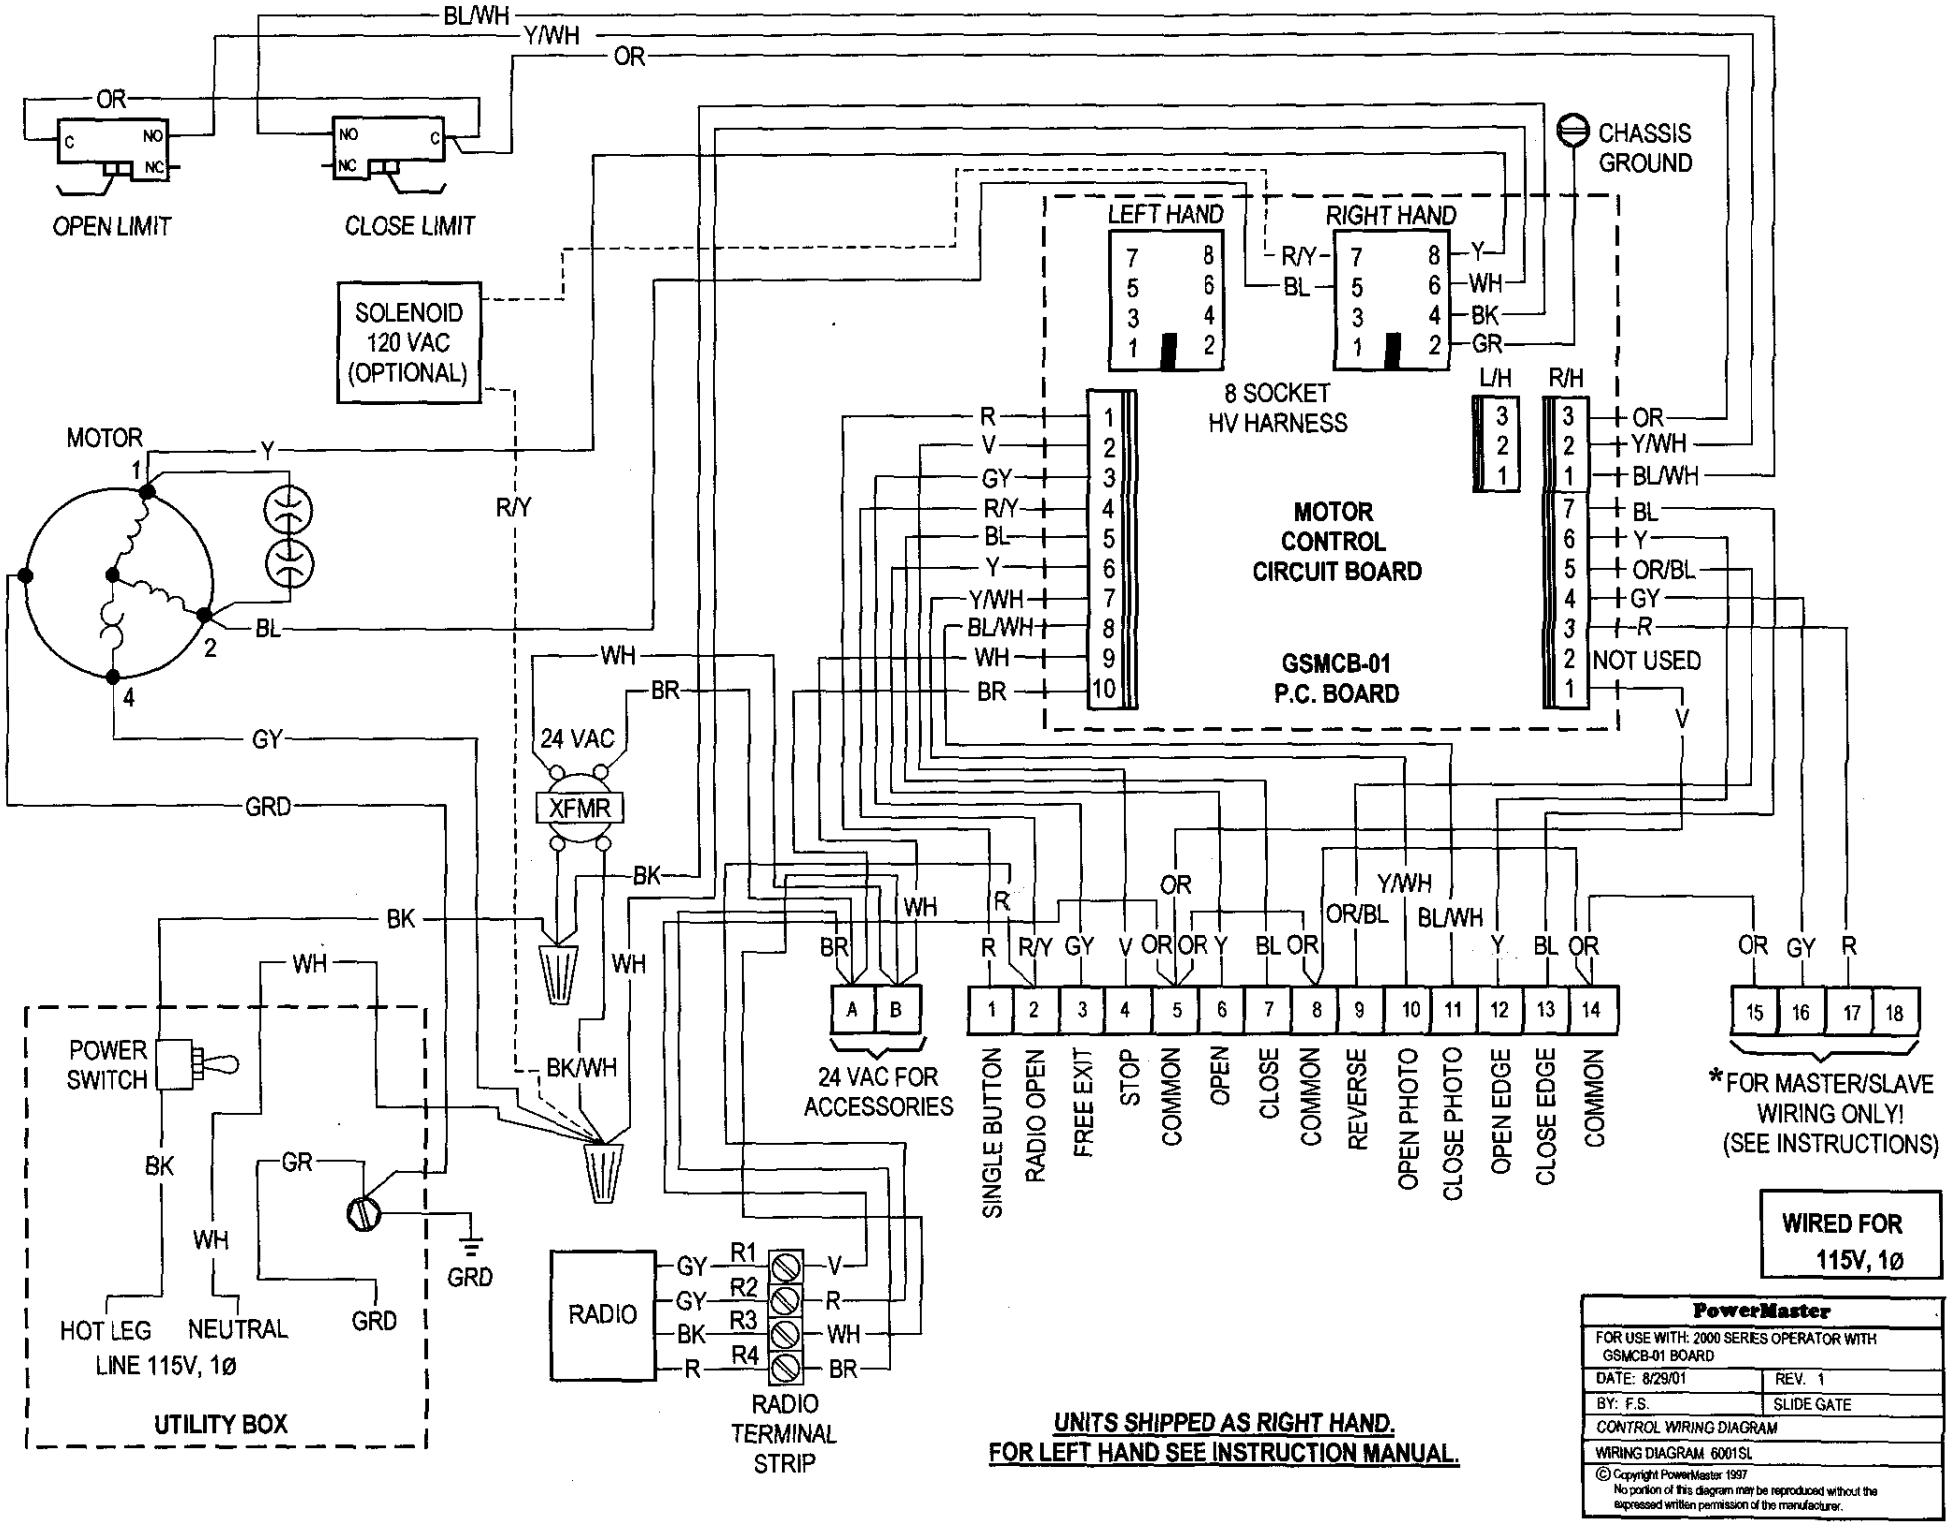
BL/WH
Y/WH
OR
OR
C
NO
NC
OPEN LIMIT
CLOSE LIMIT
CHASSIS GROUND
SOLENOID 120 VAC (OPTIONAL)
LEFT HAND
RIGHT HAND
R/Y
BL
Y
WH
BK
GR
8 SOCKET HV HARNESS
L/H
R/H
MOTOR
Y
R/Y
BL
GRD
GY
WH
BR
24 VAC
XFMR
BK
BK/WH
MOTOR CONTROL CIRCUIT BOARD
GSMCB-01 P.C. BOARD
R
V
GY
R/Y
BL
Y
Y/WH
BL/WH
WH
BR
OR
Y/WH
BL/WH
OR/BL
NOT USED
POWER SWITCH
HOT LEG
NEUTRAL
LINE 115V, 1Ø
UTILITY BOX
RADIO
R1
R2
R3
R4
RADIO TERMINAL STRIP
24 VAC FOR ACCESSORIES
SINGLE BUTTON
RADIO OPEN
FREE EXIT
STOP
COMMON
OPEN
CLOSE
COMMON
REVERSE
OPEN PHOTO
CLOSE PHOTO
OPEN EDGE
CLOSE EDGE
COMMON
*FOR MASTER/SLAVE WIRING ONLY! (SEE INSTRUCTIONS)
WIRED FOR 115V, 1Ø
UNITS SHIPPED AS RIGHT HAND.
FOR LEFT HAND SEE INSTRUCTION MANUAL.
PowerMaster
FOR USE WITH: 2000 SERIES OPERATOR WITH GSMCB-01 BOARD
DATE: 8/29/01
REV. 1
BY: F.S.
SLIDE GATE
CONTROL WIRING DIAGRAM
WIRING DIAGRAM 6001SL
© Copyright PowerMaster 1997
No portion of this diagram may be reproduced without the expressed written permission of the manufacturer.

6001SL.max